


## CD70 AUX IN PIN Connection

INSERT THE WIRE TO CONNECTOR

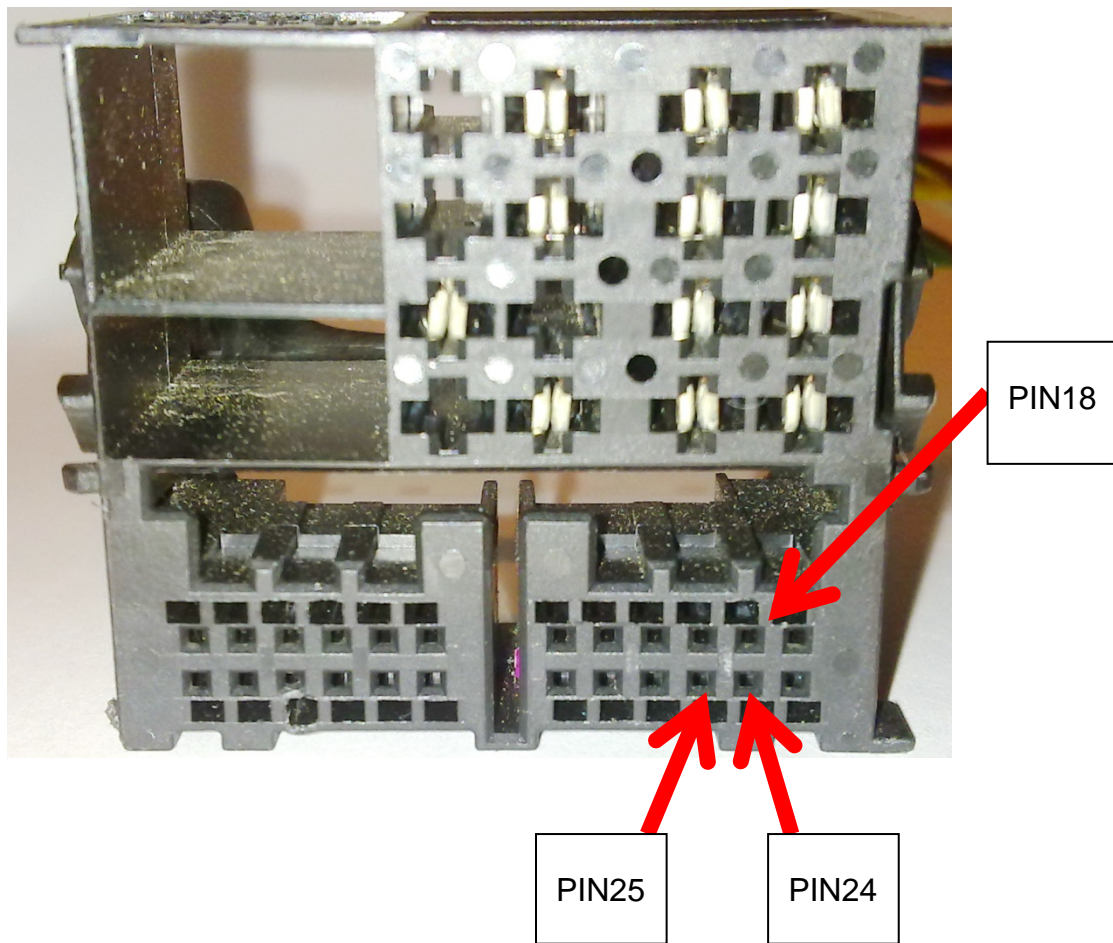

PIN24— AUX Left Input

PIN25—AUX Right Input

PIN18—AUX Signal Ground

---


### NOTE:

Do not connect PIN18 to vehicle ground.


Most cars already have these wires in the connector.

# CD70 AUX IN PIN Connection

## HOW TO INSERT THE CRAMPS TO QUADLOCK CONNECTOR

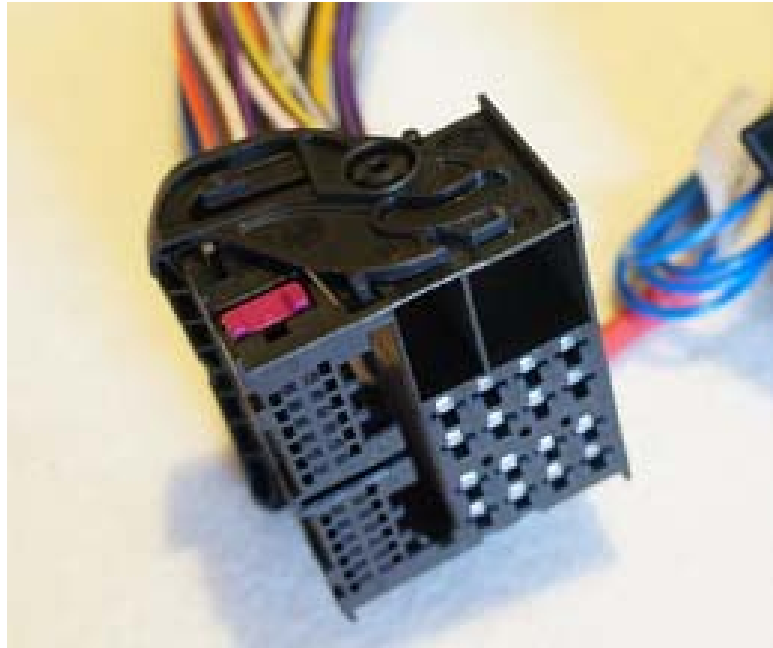

This is typical look of Quadlock connector (left)

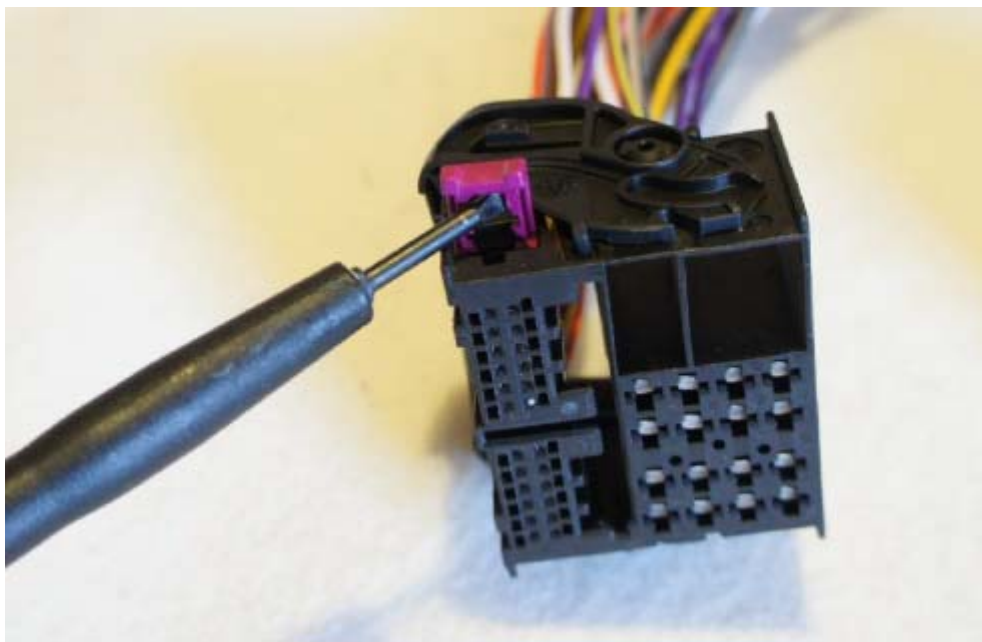

Fully prise the purple cramp clips on both sides.


## CD70 AUX IN PIN Connection

Please make sure you know which pin to insert before continue.

Fully insert the wires with female cramp into the quadlock connector pin housing, then refit the purple cramp clips to the quadlock connector.

# CD70 AUX IN PIN Connection

## WIRING DIAGRAM

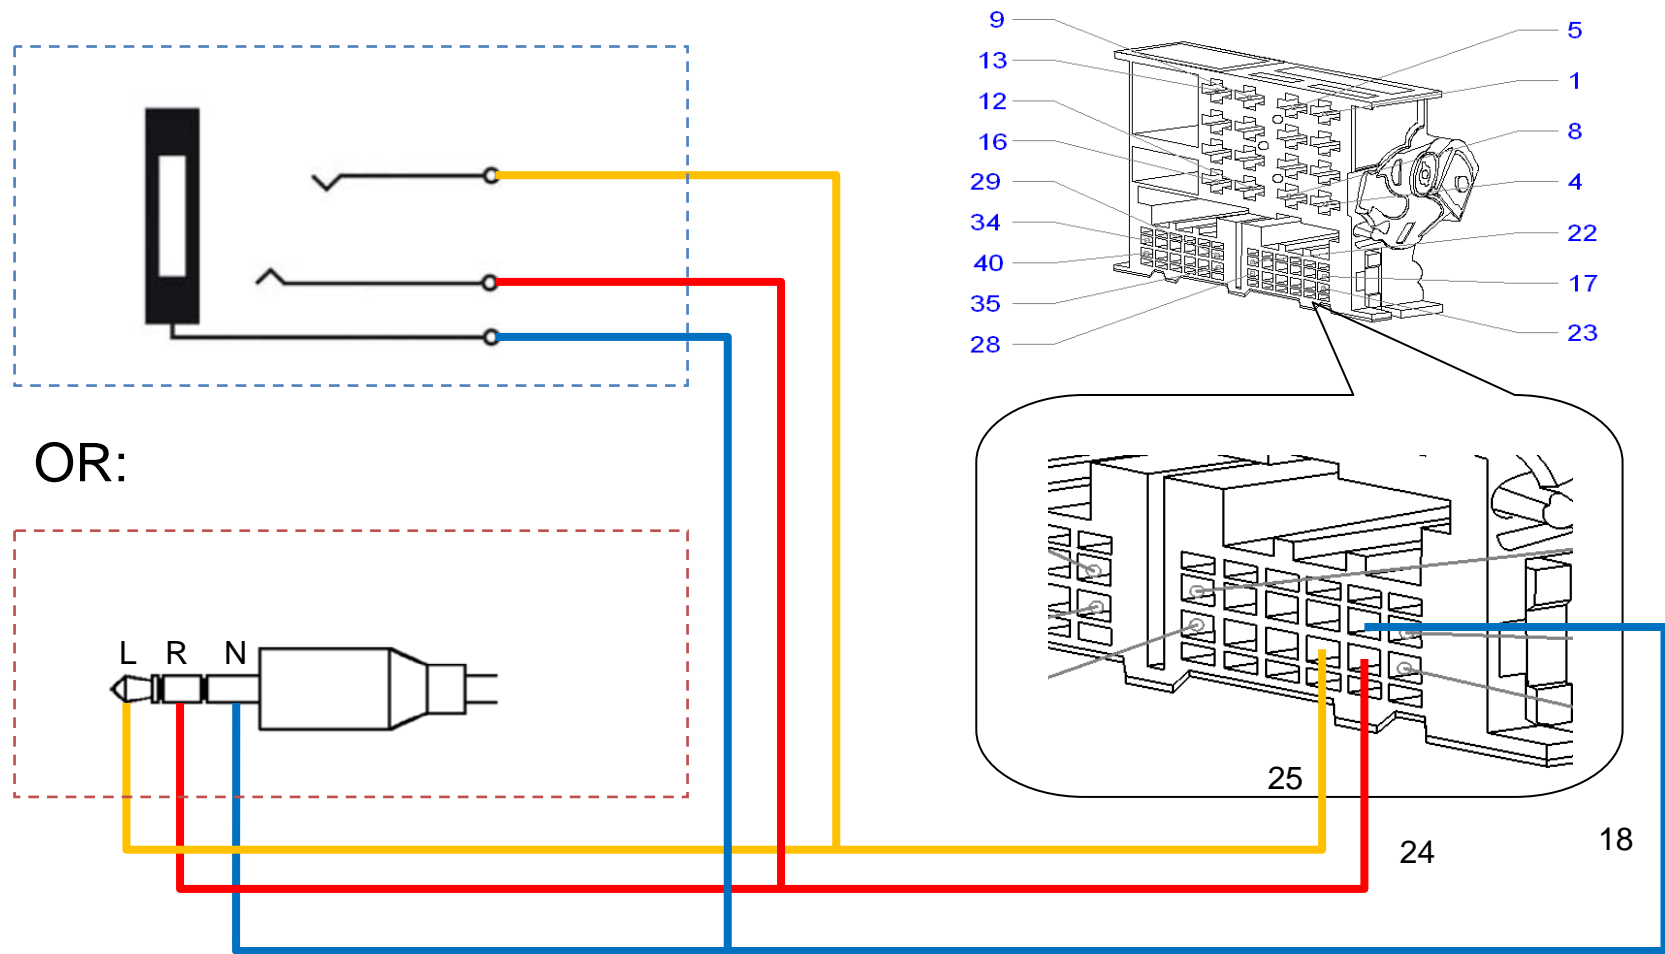

**YOU TAKE YOUR OWN RISKS FOR THIS MODIFICATION! THIS IS ONLY A GUIDE.**

**YYSNET MAR 2012**

## CD70 AUX IN PIN Connection

You could place your input socket like this (Red circle):



Enjoy!

yysnet